

# Ecomoods

30185/\*\*/16



Gebruiksaanwijzing

Notice d'emploi

Benutzerhandbuch

 
 
User manual

Manual de usuario





# PHILIPS



Incl.

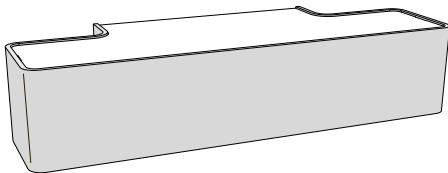



Excl.

  





Type I → p.4


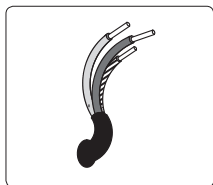 
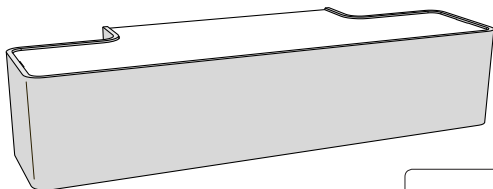 





Type II → p.8


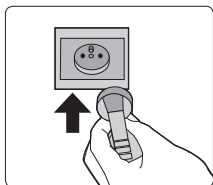 
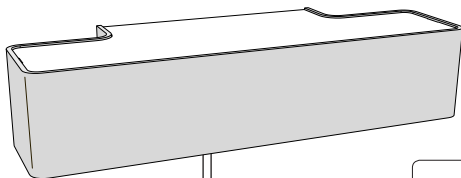 


Type I

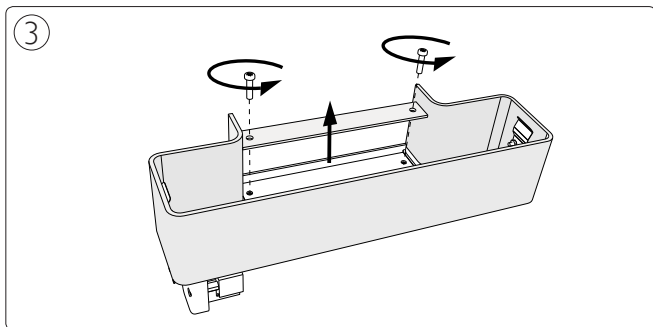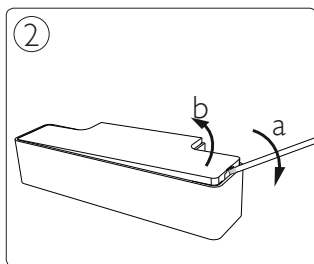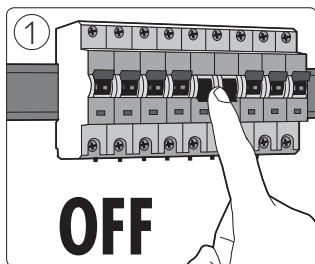    


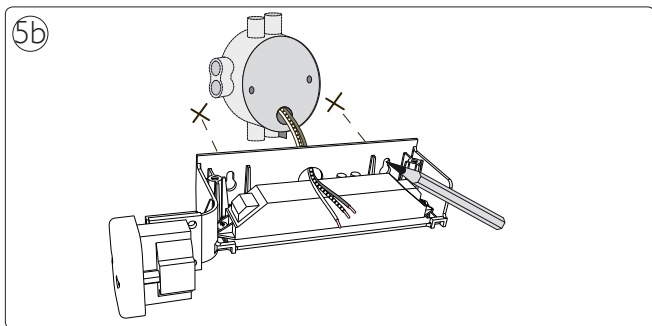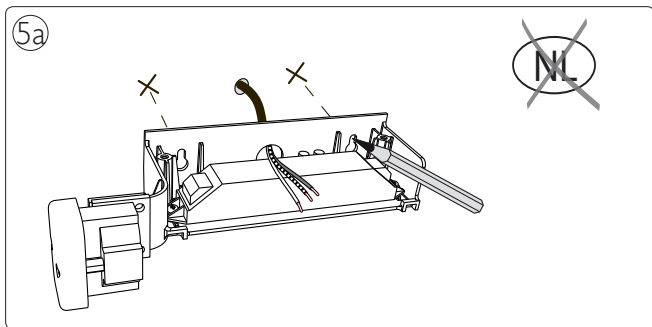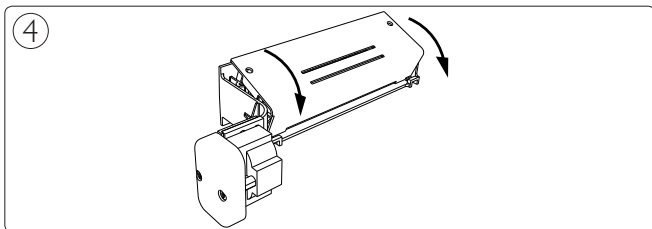   

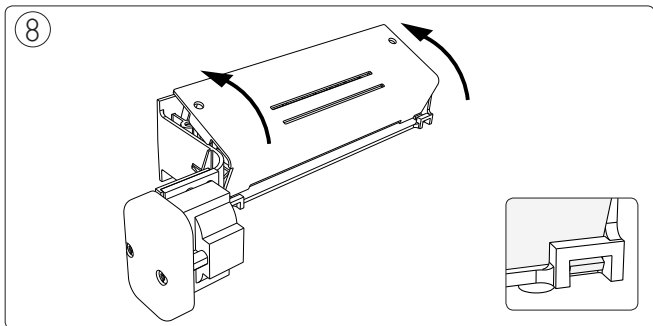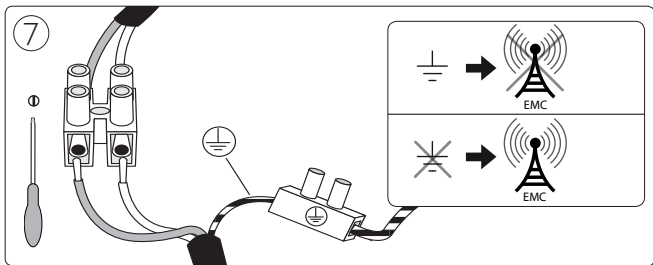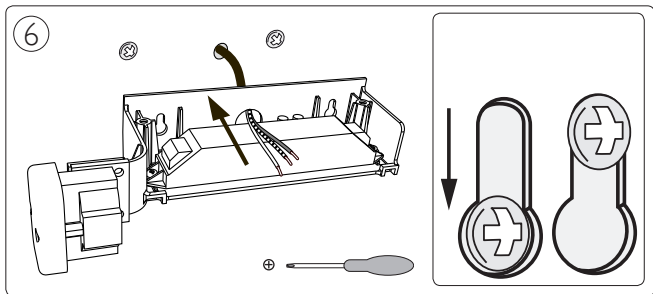   


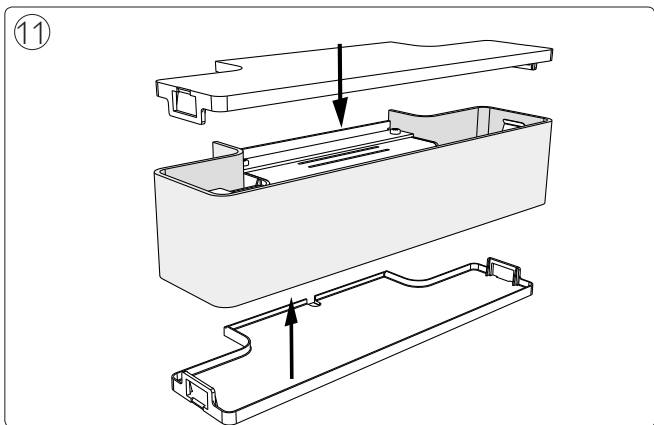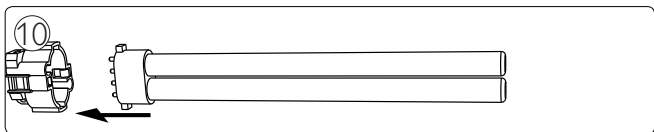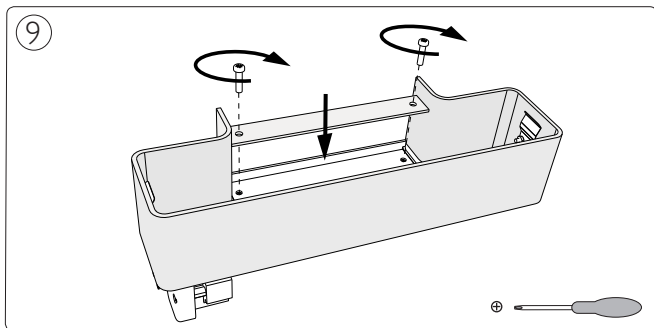   


Type II

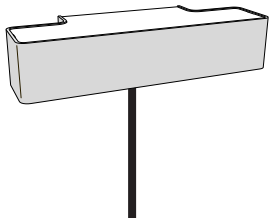 


①

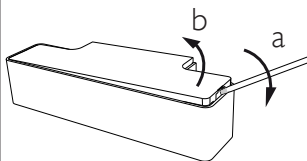 



②



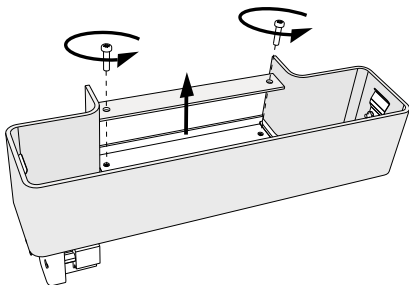 





③

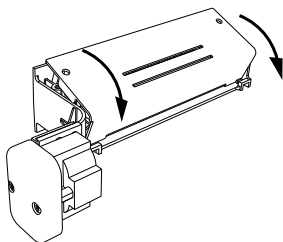 



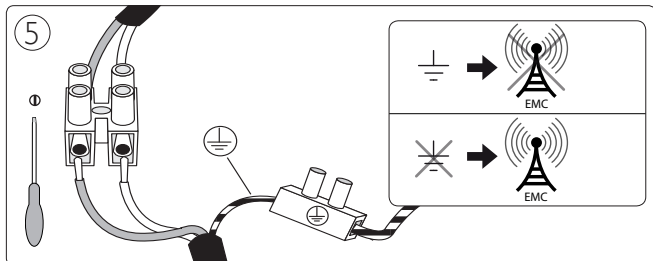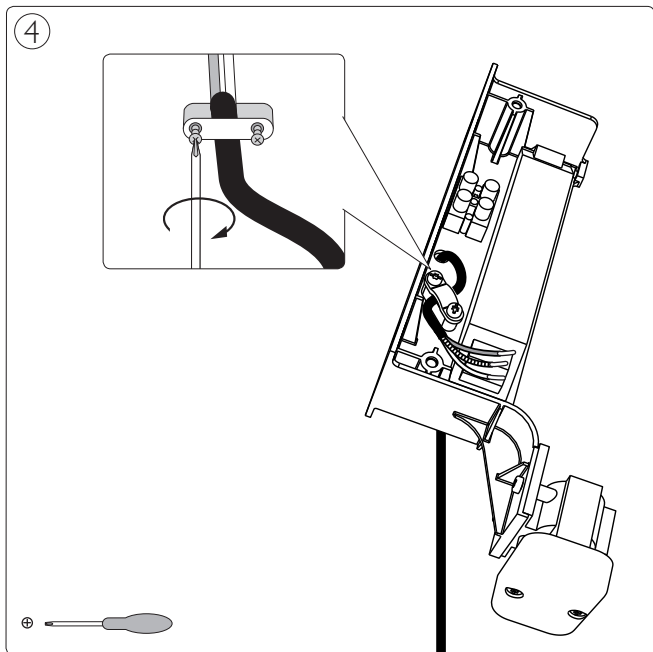  

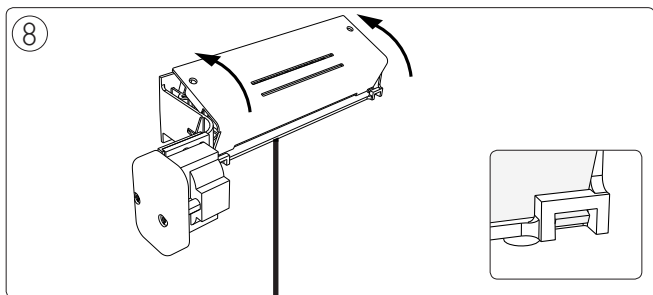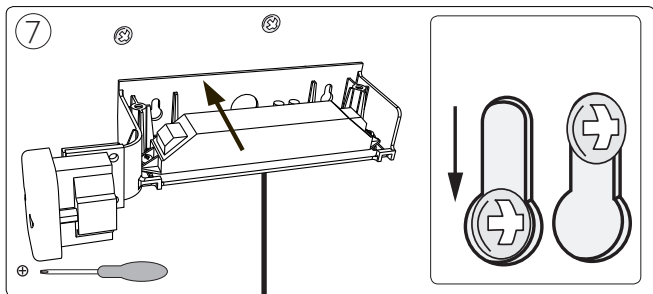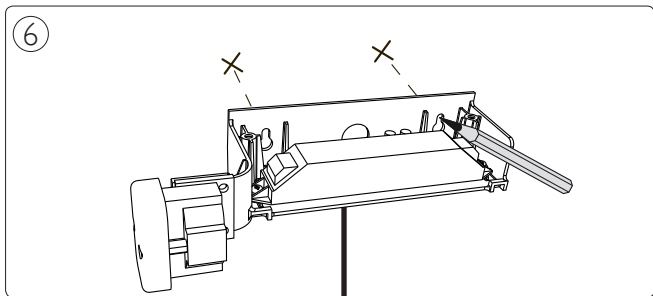   

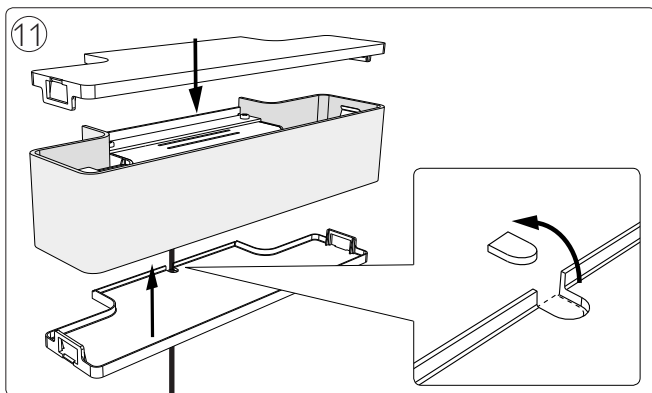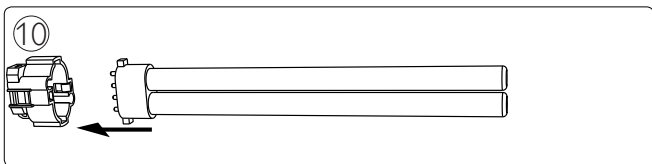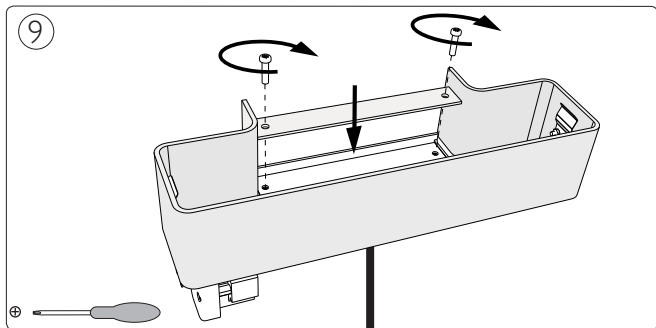   



Philips Consumer Luminaires  
Satenrozen 13  
2550 Kontich – Belgium  
[www.philips.com](http://www.philips.com)

MC0 000 553P  
Last update: 18/06/14